

Exterior LUUV HANDLE

Instructions

THE LUUV HANDLE HAS A SLIDE ON THE BOTTOM
IT HAS A CAP ON THE TOP SIDE

LOOSE THE SCREWS FROM THE INSIDE OF DOOR

GO OUTSIDE – SLIP THE BOTTOM UP THE PLATE

SET CAP OVER TOP OF PLATE

PULL DOWN UNTIL TOP CAP IS SET

GO INSIDE – TIGHTEN THE SCREWS DOWN!!!!

JOB COMPLETE!!!

ENJOY YOUR LUUV HANDLE

LuvvHandle.com

Disclaimers

****The plate on the door handle can be broken if the door plate is bent too much or too often – it is thin metal – be careful. The Luuv Handle and any person or persons connected to the Luuv Handle hold no responsibility for the above. Luuv Handle holds NO liability or responsibility for injuries, damages or even death incurred during the installation and/or while using the Luuv Handle!**